





Estrattori Strippers



Premio Seminatore d'Oro
Golden Sower Award

Estrattori

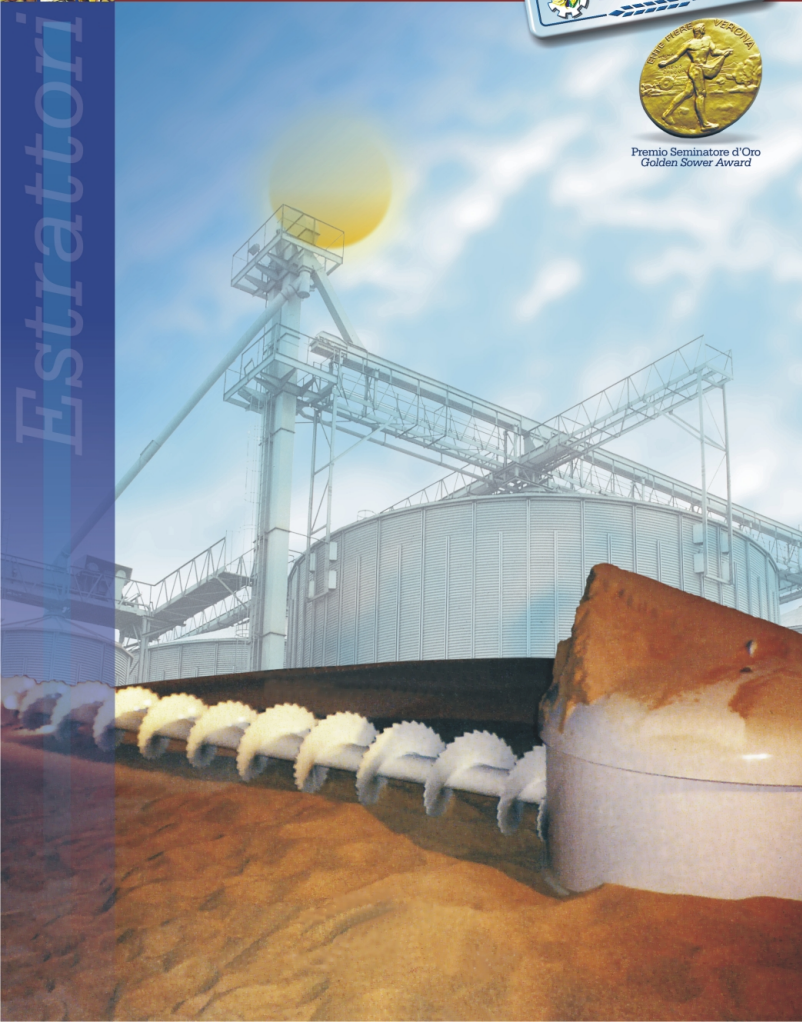

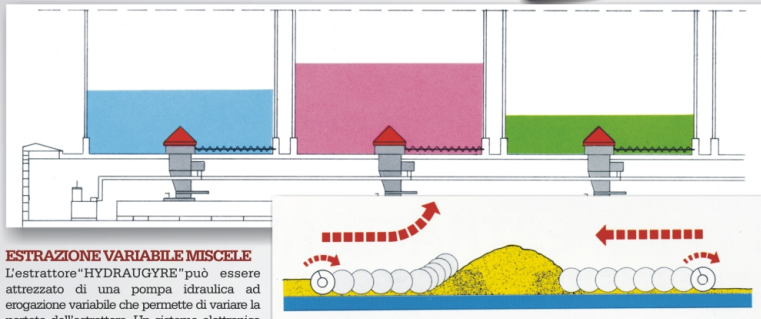Dati tecnici / Technical Data

ESTRAZIONE VARIABILE MISCELE

L'estrattore "HYDRAUGYRE" può essere attrezzato di una pompa idraulica ad erogazione variabile che permette di variare la portata dell'estrattore. Un sistema elettronico permette di variare la portata dell'estrattore.

L'estrattore "HYDRAUGYRE" ha un movimento planetario invertito. È importante per due motivi:


- 1) con il movimento invertito estrae completamente il prodotto lasciando sul fondo del silo solo la quantità determinata fra il fondo e la coclea. Invece nel senso normale la coclea lascia un minimo di prodotto di cm. 10 a cm. 15.
- 2) se la coclea incontra un ostacolo (prodotto impaccato, appiccicato, prodotto legnoso), in movimento invertito, la coclea tende ad alzare il prodotto per passare sotto. In senso normale la coclea tende a passare sopra, rotolando, con rischi di alterazione o peggio di rottura dell'asse della coclea.

VARIABLE GAS EXTRACTION

The extractor "HYDRAUGYRE" can be equipped with a hydraulic pump to supply variable that allows to vary the flow rate of the extractor. An electronic system allows to vary the flow rate of the extractor.

The extractor "HYDRAUGYRE" has a planetary movement reversed. It is important for two reasons:

- 1) with the movement inverted extracts completely the product leaving the bottom of the silo only the amount determined between the bottom and the cochlea. Instead in the normal sense of the screw leaves a minimum product of cm. 10 to cm. 15.
- 2) If the auger encounters an obstacle (the packaged product, stuck, product woody), moving reversed, the screw tends to raise the product to pass under. In the normal sense of the cochlea tends to pass over, rolling, with the risk of altering or worse breaking the axis of the cochlea.

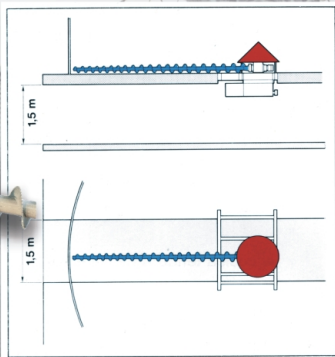
HYDRAUGYRE


è disponibile in vari modelli
is available in various models

TIPO	Ø MAX
HHP	3,50
HP	5,50
HM	800
HMC	10
HG	18



35045 **OSPEDALETTO EUGANEO (PD)**
Via Maggiore, 81

Tel. +39 0429 679060 - +39 0429 679166
Fax +39 0429 670222

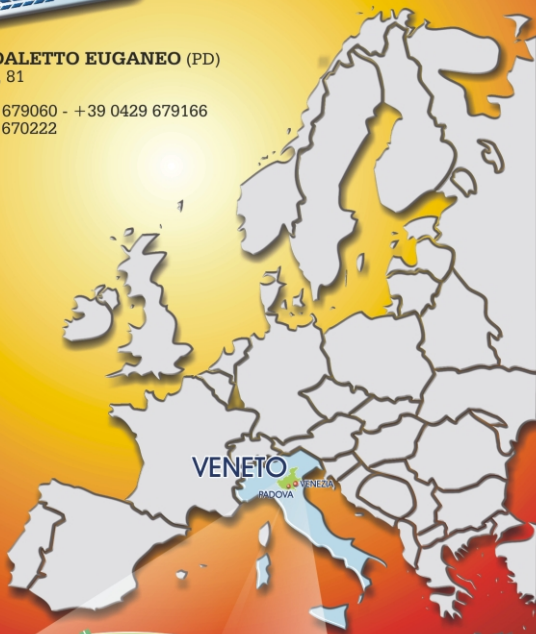

**COME ARRIVARE a
OSPEDALETTO EUG. (PD)**